


How to set up motion record on the Hyperflex system

The logo for Hyperflex, featuring the word "Hyperflex" in a stylized, italicized, metallic font with a horizontal line underneath the "erflex" portion, and a large "X" at the end. The logo is set against a black rectangular background.


*Hyperflex*X

Log into the Hyperflex system


Click on the "settings" Tab

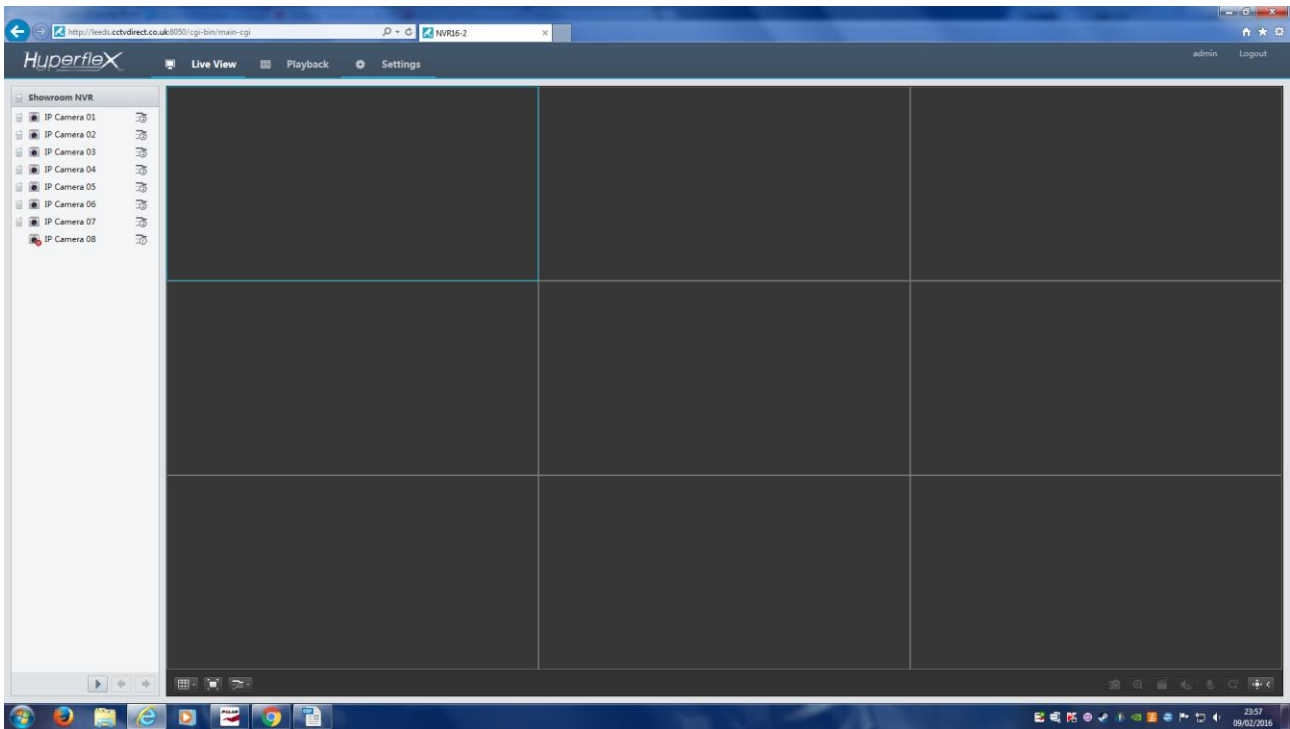


Click on the camera on the menu on the left hand side

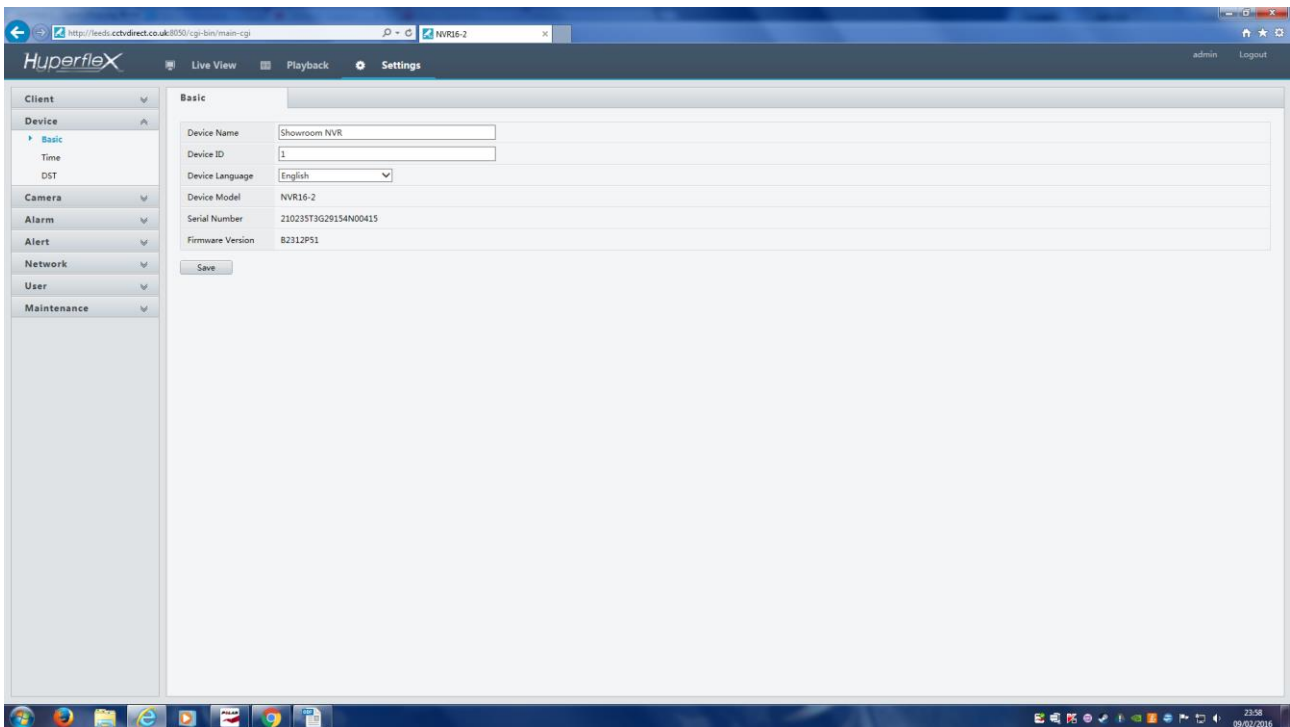


Edit the motion grid Draw the shapes of the areas you wish to cover

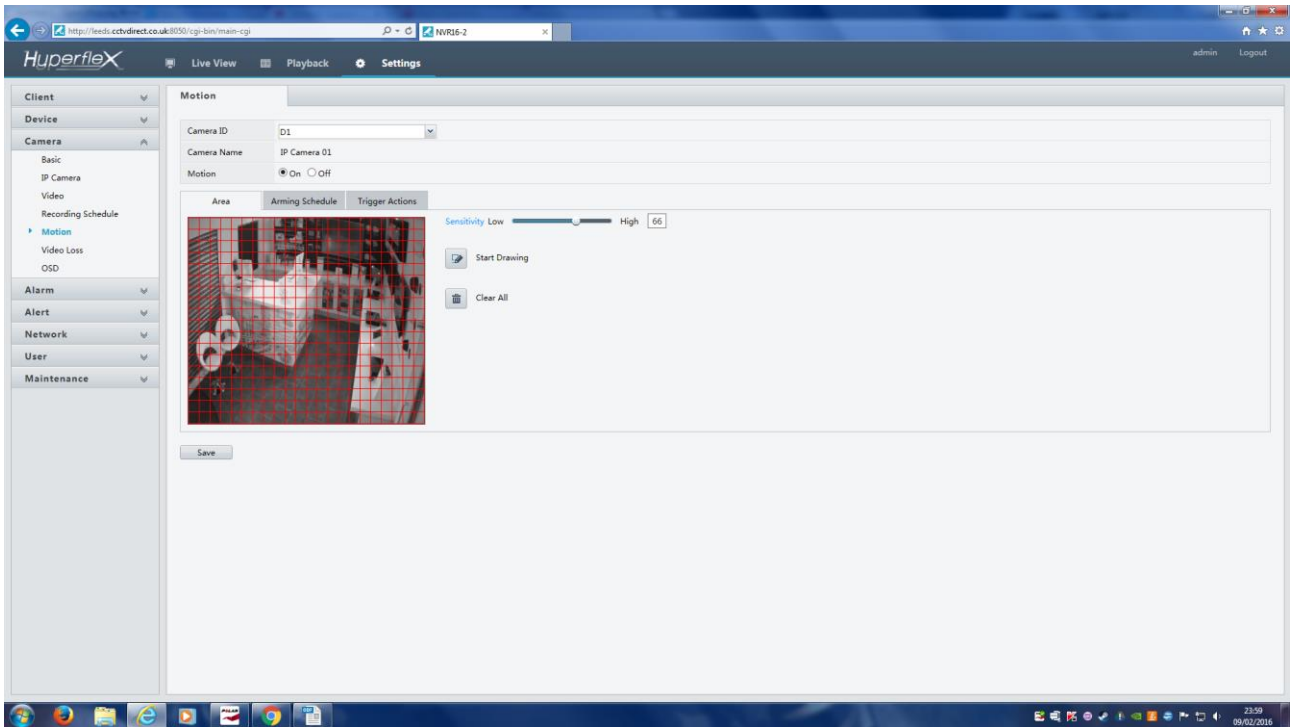


In the arming schedule make sure you have selected the time you wish for motion to be activated.

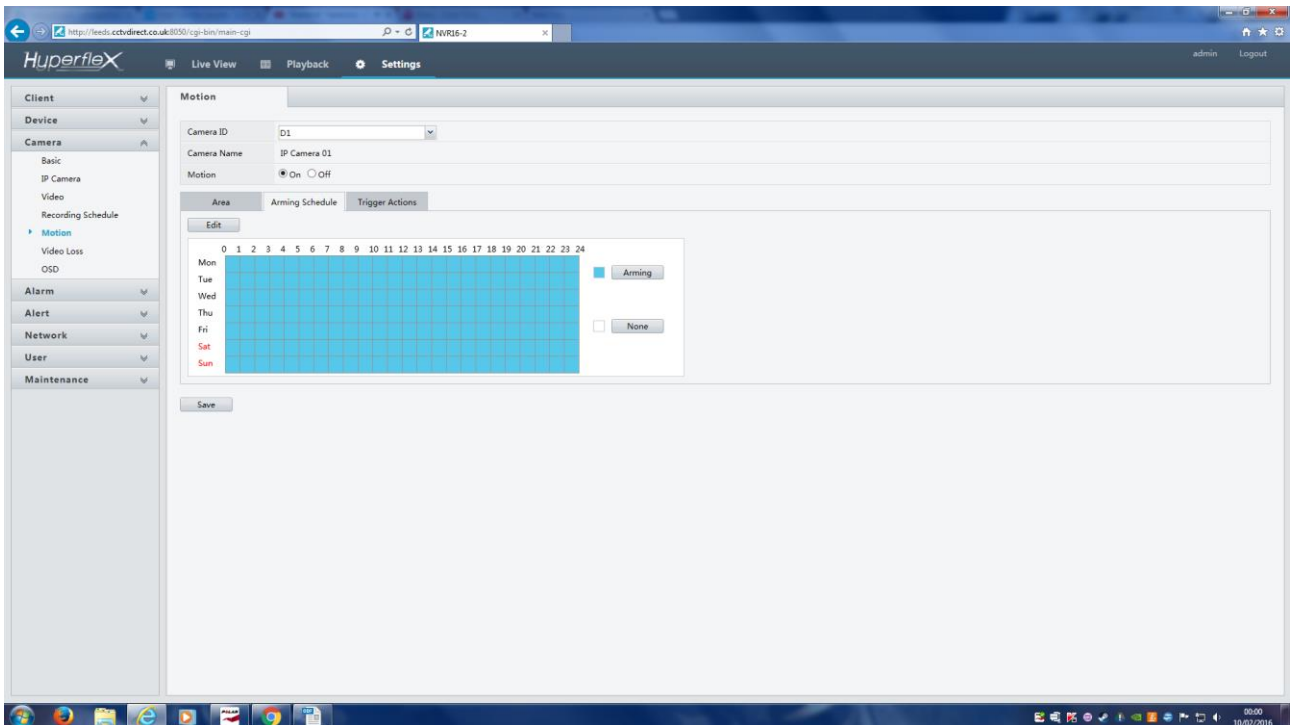


In the trigger actions, go to the trigger recording section and select the cameras you wish to record. Make sure you press the save button.

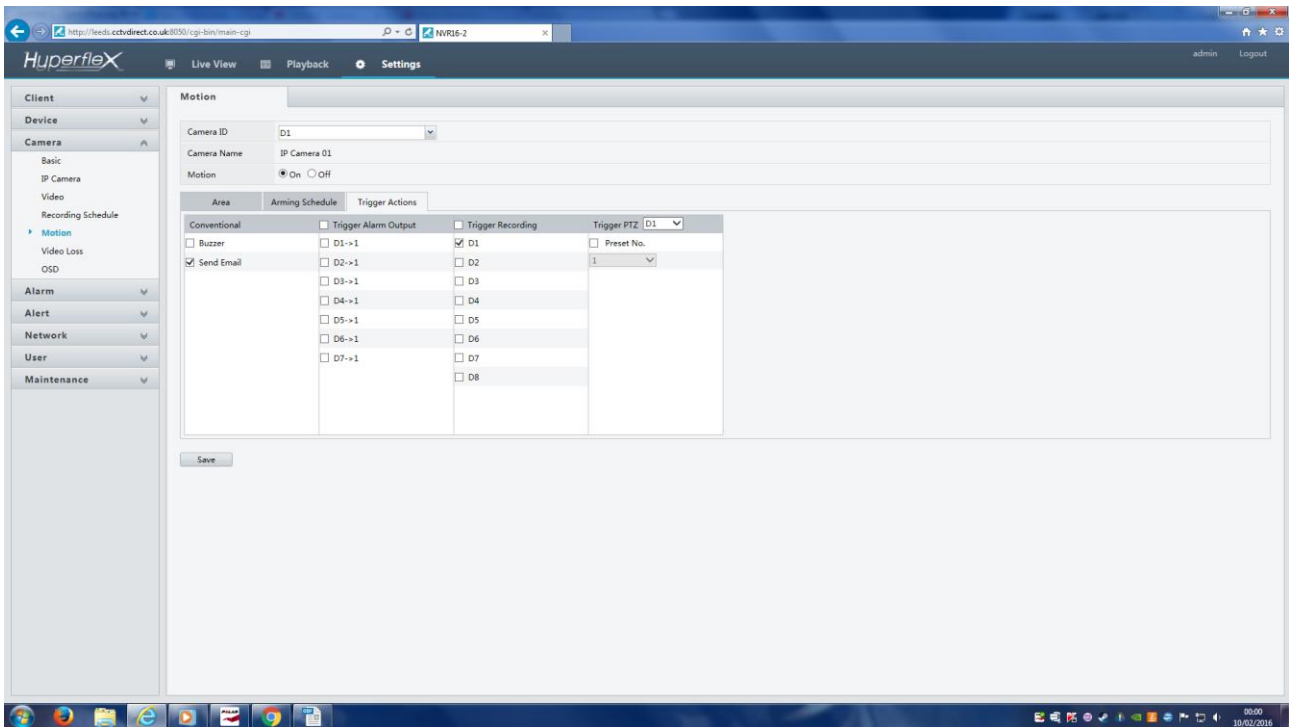

Go to the recording schedule on the camera menu on the left hand side. Press the motion button and select the times you would like motion to be active

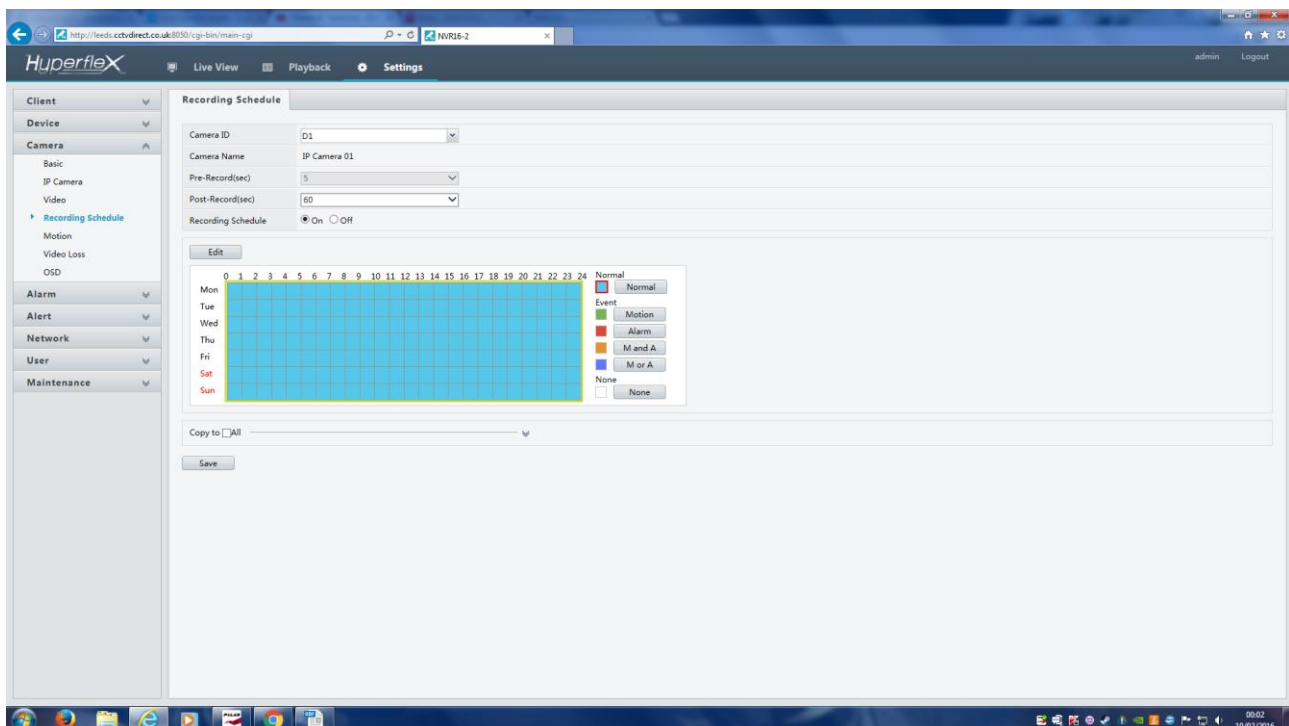

In the example below every hour every day is selected for motion record. Click save to implement this

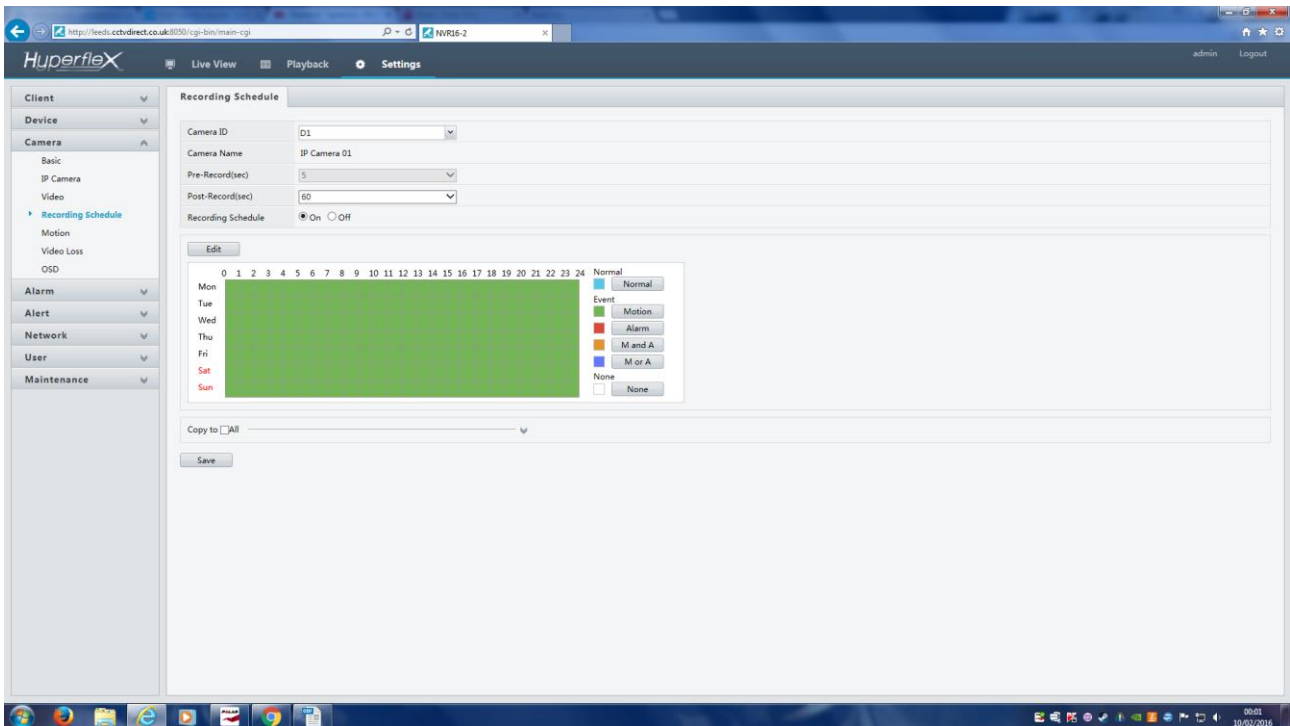

Repeat for Each camera you want on motion record

